

SAVIN COPIERS - METER INSTRUCTIONS

(model numbers may have suffixes of D,DL,DP,RF,Z)

Model	Instruction	
2013		
2015DP	1. Press the 'User Tools/Counter' button (located to the left of the display panel. 2. From the display panel, press the button directly below "counter" (this will display the counter total). 3. Press the button directly below "print" to print out the counter.	b/w
2035DP		
2045DP		
2050		
2060		
2070DP		
2085DP		
2235		
2512		
2513		
2515		
2518		
2522		
2527		
2535		
2560		
2575		
2585		
SF 3630	Press FUNCTION. Press 6 on the keypad. When 4 black boxes appear enter 2222. Press 94. Press YES. Press Yes again for more counter readings (record print #). Press FUNCTION to end.	FAX
SF 3670	Press FUNCTION. Press 6 on the keypad. When 4 black boxes appear enter 2222. Press 94. Press YES. Press Yes again for more counter readings (record print #). Press FUNCTION to end.	FAX
SF 3640	Press FUNCTION. Press 6 on the keypad. When 4 black boxes appear enter 2222. Press 94. Press YES. Press Yes again for more counter readings (record print #). Press FUNCTION to end.	FAX
SF 3680	Press FUNCTION. Press 6 on the keypad. When 4 black boxes appear enter 2222. Press 94. Press YES. Press Yes again for more counter readings (record print #). Press FUNCTION to end.	FAX
SF 3685	Press FUNCTION. Press 6 on the keypad. When 4 black boxes appear enter 2222. Press 94. Press YES. Press Yes again for more counter readings (record print #). Press FUNCTION to end.	FAX
SF 3699	Press USER TOOLS. Select Key OP Tools and press the # key. Choose System Settings. Press Counter.	FAX
4022		
4027		
5015	Inside, middle left	
7015	Inside, bottom left	
7060	Bottom left	
7065	Bottom left	
7120	Inside , bottom	
7220	Inside door	
7250	Inside door	

7334	Inside door, lower right	
7430	Inside door, lower right	
9013	Inside, top middle, right	
9027		
9032		
9035		
9113		
9122		
9130	Inside, left	
9220		
9335	Inside middle right	
9400		
9450	Right door middle	
9500	Right door middle	
9520	Inside, bottom right	
9550	Right door middle	
9600	Right door middle	
9650	Right door middle	
9700	Right door middle	
9710	Inside middle right	
9918 DP	1. Press the 'User Tools/Counter' button (located to the left of the display panel. 2. From the display panel, press the button directly below "counter" (this will display the counter total). 3. Press the button directly below "print" to print out the counter.	b/w
9920DP	Open front cover, located under C-2 area.	
9935	Open door to left	
9980	Press USER TOOLS. Select Key OP Tools and press the # key. Choose System Settings. Press Counter.	FAX
5015RE	Inside, middle left	
7015RE	Inside, bottom left	
7035AD	Inside door	
9013Z	Inside, top middle, right	
9027L	Front door, Top middle	
9035DL	Front door, Top middle	
9080N	Right door middle	
9130Z	Inside, left	
9800		
9918DP		
9920DP	Front door under C2 area	
9922DP		
9927DP		
9935DP		
9940DP		
9955DP		
9965DP		
25105		