

SHARP METER READINGS

AR151	Press the clear key to reset the display to zero, press and hold down the clear key for approximately 5 seconds. The total number of copies will appear in two steps, each with three digits.	Sharp
AR161	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
AR205	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2025	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2027	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2114	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2120	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2214	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2314	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
7370	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
7320	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
8200	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2035	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2040	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2050	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
2530	Hold down the 0 key and it will flash two digit numbers three times. If that doesn't work, hold the scroll key down.	Sharp
A275	Press the copy button and it should display the count	Sharp
A335	Press the copy button and it should display the count	Sharp
A405	Press the copy button and it should display the count	Sharp
AR250	Press the copy button and it should display the count	Sharp
AR287	Press the copy button and it should display the count	Sharp
AR337	Press the copy button and it should display the count	Sharp
AR407	Press the copy button and it should display the count	Sharp
AR-C270	To the left of the display are two buttons: "Copy" and "Print". Hold each one down independently for their respective totals.	Sharp

AR-C330 (SF33C)	Press the COPY key once to select COPY mode, then press and hold the COPY key again to display the total number of color & b/w copies. Press the PRINT key once to select PRINT mode, then press and hold the PRINT key again to display the total number of color & b/w prints. Customer needs to add together the total color copy/total color print for the color meter; total b&w copies/total b&w prints for the b/w meter.	Sharp
	<p>HOLD DOWN THE COPY BUTTON AND THE METERS WILL APPEAR ON THE DISPLAY SCREEN IN THIS ORDER: FIRST – BLACK METER SECOND – FULL COLOR THIRD – 2 COLOR FOURTH – SINGLE COLOR ADD ALL THE COLORS TOGETHER FOR THE TOTAL COLOR METER</p>	COLOR

MX5500