

CANON METER READINGS

| Model # | Instructions | Type of machine |
|---------|---|-----------------|
| 1310 | Go to "add features". Press "+", "counter check", then set button. Should see "total T1" and the numbers (meter). | b/w (IR) |
| 1330 | Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen. | b/w (IR) |
| 1370F | Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen. | b/w (IR) |
| 1600 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 1630 | Press the "Additional Function" key, located above the display screen. Press the arrow keys to # 8. Press "Set" located at the bottom of the display screen. T1 is the meter. | b/w (IR) |
| 1670F | Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen. | b/w (IR) |
| 2000 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 2010f | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 2200 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 2800 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 3300I | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 3300 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 3320 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| IR3570 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | |
| 400S | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |

| | | |
|---------|---|-----------|
| IR4570 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | |
| 5000 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 5000I | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 6000 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 7200 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| IR85 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 8500 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| 105 | Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1. | b/w (IR) |
| IR220 | Go into Additional Functions-hit the set key-then hit the minus key and it tells the count. | b/w (IR) |
| 2020I | Press the counter check button. | b/w (IR) |
| CLC4000 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following | COLOR (C) |
| C3100 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | COLOR (C) |
| C3200 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | COLOR (C) |
| C5000 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | COLOR (C) |
| C5180 | Press the counter button on the control panel. Copier will display Total meter (#1), B/W meter (#2), and color meter (#3) as well. Record both B/W and Color reading. | COLOR (C0 |
| 6800 | Press the counter button at the top of the control panel (above the red stop button). The display will show 3 separate readings. Record "total black" as your b/w reading. To get the color meter subtract the "total | COLOR (C) |

| | | |
|--------|--|------------------|
| 5000 | Machine has a mechanical meter located inside the front door on the left hand side. To get the color meter use the following formula Total meter – b/w = color meter. | Color Laser (CL) |
| 3900 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | Color Laser (CL) |
| 5020 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | Color Laser (CL) |
| 6020 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | Color Laser (CL) |
| 1100 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | Color Laser (CL) |
| 1180 | Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter | Color Laser (CL) |
| | THE MAJORITY OF CANON FAX MACHINES DO NOT HAVE A METER WITH THE EXCEPTION OF THE FOLLOWING: | |
| C2060P | 1. Lift the lid. 2. Press data registration (button) 3. Press # 4. Press Report (button) 5. Arrow down until you see system dump 6. Press set 7. Meter will print (Several pages) 8. The meter is the number that appears next to PRINT on page one. | FAX |
| LC3170 | DATA REGISTRATION, # SCROLL DOWN TO PRINTER PRESS "SET" BUTTON SCROLL DOWN TO PRINTER COUNT PRESS "SET" BUTTON AGAIN | FAX |
| LC510 | PRESS ADDITIONAL FUNCTIONS, #, 9, SHOULD SAY "COUNTERS", SELECT TOTAL (MAY BE ABBREVIATED TTL) SHOULD SHOW THE METER | FAX |
| LC710 | | FAX |
| | | |
| | | |
| | | |