

RICOH METER READINGS

Model #	INSTRUCTIONS	Type of machine
Aficio 150	Press user tool/counter button, Counter will appear in the bottom left corner. Press button under counter and pages printed will appear	COPIER
Aficio 180	Press user tool/counter button, Counter will appear in the bottom left corner. Press button under counter and pages printed will appear	COPIER
Aficio 200	Inside, middle left	COPIER
Aficio 220	Press user tool/counter button, Counter will appear in the bottom left corner. Press button under counter and pages printed will appear	COPIER
Aficio 250	Inside, middle left	COPIER
Aficio 270	Press user tool/counter button, Counter will appear in the bottom left corner. Press button under counter and pages printed will appear	COPIER
Aficio 350	Open front door and it is to the left of the toner cartridge	COPIER
Aficio 400	Open front cover on the left side	COPIER
Aficio 401	Open front cover on the left side	COPIER
Aficio 450	Open front door and it is to the left of the toner cartridge	COPIER
Aficio 500	Open front cover on the left side	COPIER
Aficio 550	Open front door on right side below toner cartridge	COPIER
Aficio 551	Open front door on right side below toner cartridge	COPIER
Aficio 650	Open front door on right side below toner cartridge	COPIER
Aficio 650	Inside, middle left	COPIER
Aficio 700	Open front door on right side below toner cartridge	COPIER
Aficio 850	On left of panel press counter button and it will display counter	COPIER
Aficio 1027 DC	Press User Tools, Press Counter.	COPIER
Aficio 1013	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1015	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1018	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1022	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1027	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1035	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1045	Open front door and meter is to the left of where you put the toner	COPIER
Aficio 1050	On left of panel press counter button and it will display counter	COPIER
Aficio 1055	Open Front Cover look on right side below toner looks like odometer on your car	COPIER
Aficio 1060	Open Front Cover look on right side below toner looks like odometer on your car	COPIER
Aficio 1075	Open Front Cover look on right side below toner looks like odometer on your car	COPIER
Aficio 1085	Open left front cover and toner is on left side above fusing unit	COPIER
Aficio 1105	Open left front cover and toner is on left side above fusing unit	COPIER
1515	Press User Tools Button then press counter on the display	COPIER
Aficio 1224C	Press User Tools Button then press counter on the display	COLOR
Aficio 1232C	Press User Tools Button then press counter on the display	COLOR
Aficio 2003		COLOR
Aficio 2015	Press User Tools Button then press counter on the display	COPIER
Aficio 2018	Press User Tools Button then press counter on the display	COPIER
Aficio 2022	Press User Tools Button then press counter on the display	COPIER
Aficio 2027	Press User Tools Button then press counter on the display	COPIER
Aficio 2035	Press User Tools Button then press counter on the display	COPIER
Aficio 2045	Press User Tools Button then press counter on the display	COPIER
Aficio 2051	Press User Tools Button then press counter on the display	COPIER
Aficio 2060	Press User Tools Button then press counter on the display	COPIER
Aficio 2075	Press User Tools Button then press counter on the display	COPIER
Aficio 2090	Open left front cover and toner is on left side above fusing unit	COPIER
Aficio 2103		COLOR
Aficio 2105	Open left front cover and toner is on left side above fusing unit	COPIER
Aficio 2203		COLOR
Aficio 2232	Press User Tools Button then press counter on the display	COPIER
Aficio 2238	Press User Tools Button then press counter on the display	COPIER

Aficio 3006		COLOR
3025S	Press User Tools Button then press counter on the display	COPIER
3228C	Press User Tools Button then press counter on the display	COPIER
3235C	Press User Tools Button then press counter on the display	COPIER
3245C	Press User Tools Button then press counter on the display	COPIER
Aficio 3506		COLOR
Aficio 4006		COLOR
Aficio 4106		COLOR
Aficio 4506		COLOR
Aficio 5106		COLOR
Aficio 5206		COLOR
Aficio 6010	Press Counter button-located on panel on the far right side of the op panel	COLOR
Aficio 6110		COLOR
Aficio 6513	On right side of operations panel, press the counter button	COLOR
AP204	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP206		PRINTER
AP305	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP306	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP410	Press Menu, Press up & down until you see list print and press enter	
AP505	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP1400	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP1600		PRINTER
AP2000	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP2600		PRINTER
AP2610		PRINTER
AP2700	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP3200		PRINTER
AP3800C	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP3850C		PRINTER
AP4500	Press Menu, Press up & down until you see list print and press enter	PRINTER
AP4510		PRINTER
CL3000E	Press menu. Scroll through until you see "List Print." Press Enter. You should see Configuration page. Press enter and the configuration page will print. It will say printed pages with a number and then numbers in parentheses ex: 5340 (5145/156) the first number in parentheses is the color meter and the second number is the black meter. (If it has a copy module then press user tools and counter for the meter).	PRINTER
CL3000	Press menu. Scroll through until you see "List Print." Press Enter. You should see Configuration page. Press enter and the configuration page will print. It will say printed pages with a number and then numbers in parentheses ex: 5340 (5145/156) the first number in parentheses is the color meter and the second number is the black meter. (If it has a copy module then press user tools and counter for the meter).	PRINTER
C410D	Press menu. Scroll through until you see "List Print." Press Enter. You should see Configuration page. Press enter and the configuration page will print. It will say printed pages with a number and then numbers in parentheses ex: 5340 (5145/156) the first number in parentheses is the color meter and the second number is the black meter. (If it has a copy module then press user tools and counter for the meter).	PRINTER
CL5000	Press menu. Scroll through until you see "List Print." Press Enter. You should see Configuration page. Press enter and the configuration page will print. It will say printed pages with a number and then numbers in parentheses ex: 5340 (5145/156) the first number in parentheses is the color meter and the second number is the black meter. (If it has a copy module then press user tools and counter for the meter).	PRINTER

CL7000	Press menu. Scroll through until you see "List Print." Press Enter. You should see Configuration page. Press enter and the configuration page will print. It will say printed pages with a number and then numbers in parentheses ex: 5340 (5145/156) the first number in parentheses is the color meter and the second number is the black meter. (If it has a copy module then press user tools and counter for the meter).	PRINTER
DS320		COPIER
DS5330		COPIER
DS5540		COPIER
DS5560		COPIER
DS5570		COPIER
DS5590		COPIER
DS6620		COPIER
FT2010		COPIER
FT2050		COPIER
FT2070		COPIER
FT2220		COPIER
FT2260		COPIER
FT3013	Open Front door it is on top center cover when you open front door	COPIER
FT3020		COPIER
FT3050		COPIER
FT3060		COPIER
FT3113	Open Front door it is on top center cover when you open front door	COPIER
FT3213	Open Front door it is on top center cover when you open front door	COPIER
FT3313	Open Front door it is on top center cover when you open front door	COPIER
FT3320		COPIER
FT3506	Button says counter on right side	COPIER
FT3513	Open front door, it is in the upper left corner, at the very top.	COPIER
FT3713	Open Front Door on the left under the blue "C" knob	COPIER
FT3813	Open front door on the left under the blue "C" knob	COPIER
FT4015	Open front door on the left under the blue "C" knob	COPIER
FT4022	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
FT4027	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
FT4215	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT4220	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT4222	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT4410	Inside Door	COPIER
FT4415	Inside Door	COPIER
FT4418	Inside Door	COPIER
FT4420	Inside Door	COPIER
FT4421	Inside Door	COPIER
FT4427	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT4430	Inside Door	COPIER
FT4460		COPIER
FT4480	Inside Door	COPIER
FT4490	Inside Door	COPIER
FT4522	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
FT4527	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
FT4622		COPIER

FT4822		COPIER
FT4727	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT5000	Inside Door	COPIER
FT5010	Inside Door	COPIER
5015	Inside Door	COPIER
FT5035	Open front door should be to the left above the fusing unit the section of the machine that gets hot	COPIER
FT5050	Inside Door	COPIER
FT5070	Inside Door	COPIER
5335	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
5433	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT5520		COPIER
FT5535	Open front door should be to the left above the fusing unit the section of the machine that gets hot (top middle section)	COPIER
FT5540	Inside door, lower right	COPIER
5560	Inside front door, lower right	COPIER
FT5570	Inside door, lower right	COPIER
FT5590	Inside door, lower right	COPIER
FT5632	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
5733	Open front door on lower right corner is meter looks like the odometer on your car	COPER
FT5832	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
FT5840	Open front door, it should be to the left above the fusing unit.(the section of the machine that gets hot)	COPIER
6080	Bottom left	COPIER
6085	Bottom left	COPIER
FT6620		COPIER
6645	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT6645	Right Door, middle	COPIER
FT6655	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
6655	Right Door, middle	COPIER
FT6665	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
6665	Right Door, middle	COPIER
FT6750	Middle left	COPIER
FT7060		COPIER
FT7650	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT7660	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT7670	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT7770		COPIER
FT7870		COPIER
FT7950		COPIER
FT7960		COPIER
FT7970		COPIER
FT8680	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT8780	Right Door, middle	COPIER

FT8880	Right Door, middle	COPIER
FT8980	Open front door on lower right corner is meter looks like the odometer on your car	COPIER
FT9101		COPIER
FT9105		COPIER
FX10	Press Function, "6", "2,2,2,2", "84", then "Yes" until you see Print	FAX
FW740		WIDE FORMAT
FW750		WIDE FORMAT
FW760		WIDE FORMAT
FW770		WIDE FORMAT
FW780		WIDE FORMAT
FW830		WIDE FORMAT
FW870		WIDE FORMAT
FW7030D		WIDE FORMAT
240W	Press User Tools Button then press counter on the display	WIDE FORMAT
JP1030		PRIPORT
JP1230		PRIPORT
JP1235		PRIPORT
JP3000		PRIPORT
JP5000		PRIPORT
JP5500		PRIPORT
JP8000		PRIPORT
JP8500		PRIPORT
MV74	Press Function, "6", "2,2,2,2", "84", then "Yes" until you see Print	FAX
MV106	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
MV310	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
MV310	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
MV715	Press function, '60' pause, press '2222', '95'. To clear PRESS 'Yes; then function.	FAX
NC5006		COLOR
NC8115		COLOR
SS830		PRIPORT
SS950		PRIPORT
VT1730		PRIPORT
VT1800		PRIPORT
VT2105		PRIPORT
VT2130		PRIPORT
VT2200		PRIPORT
VT2250		PRIPORT
VT2300		PRIPORT
VT3600		PRIPORT
VT3800		PRIPORT
VT6000		PRIPORT
1000L	Press Function, "53", then "YES"	FAX
1010L		FAX
1160L	Press Report button, Scroll to System Data List, Press start. List will show total counter.	FAX
1700L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
1900L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
2000L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
2050L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
2210L	Go into the menu, Press Report button, Scroll to System Data List, Press start. List will show total counter.	FAX
2400L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
2500C	Open front door and it is to the left of the toner cartridge	FAX
2500L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
2600L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
2700L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX

2800L	"Function", "51", then "Yes" "Yes"	FAX
2900L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
3000L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
3100L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
3200L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
3310L	PRESS USER TOOLS, COUNTER, USE RX PAGES COUNT	FAX
3500L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
35CPM	Open Panel and follow the directions	FAX
3700L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
3800L	Press Function, "6", "2,2,2,2", "94", then "Yes" until you see Print	FAX
3900L	Press USER TOOL button, Press arrow pointing to the right until you see 4. Key-op Tools, Press OK Press 2222, Press OK, Confirm that 1.Counter is displayed and then press OK. Press arrow to right until you see print and the number beside that is your meter.	FAX
4000L	Press"Function", "52", then "Yes"	FAX
4410L	PRESS USER TOOLS, COUNTER, USE RX PAGES COUNT	
4500L	Press Function, "5-2222", "85", then "Yes" UNTIL YOU SEE PRINT	FAX
4500L	Press Function, "6,0,2,2,2,2,9,5" The number beside PRINT is the meter	FAX
4700L	Press Function, "6,0,2,2,2,2,9,4" The number beside Print is the meter	FAX
4800L	Press Function, "6,0,2,2,2,2,9,4" The number beside Print is the meter	FAX
5000L	Press USER TOOL button, Press "2", then "1", then "01" for counter, Press the button under next until the screen shows print	FAX
5510L	PRESS USER TOOLS, COUNTER, USE RX PAGES COUNT	FAX
5600L	Press Function, "6,0,2,2,2,2,9,5" The number beside PRINT is the meter	FAX
7000L		FAX
2105		COPIER
1515	Press User Tools, Select counter, Press OK	COPIER
MPC2500	USER TOOLS, COUNTER	COLOR
MPC2510	USER TOOLS, COUNTER	
MPC3500	USER TOOLS, COUNTER	COLOR
ALL MP SERIES	COUNTER CHECK	